

Quick Setup Guide

Guest Paging w/ ECO Coaster Pagers



Components

- ANTFI ATX-02 Transmitter
- ECO Coaster Pagers
- ECO Coaster Charger Base
- Antenna
- 5V 4A Power Adapter



Setup Guide



Step 1

Connect the antenna to the connector on the transmitter. Once tightened, ensure that the antenna is pointing vertically upward.



Step 2

Plug the power adapter into the transmitter and charger base, and the 3 pin plugs into an electrical wall outlet. A surge protector is highly recommended.



Step 3

Place pagers onto the charger base. You should see a **RED** light on each pager. The **RED** light indicates that the pager is "charging" and **GREEN** light indicates that it is fully charged.

Usage Guide




Step 1

Take a pager from the charger base and hand it to the customer. Inform him/her that the pager will alert when order is ready.



Step 2

When the customer's order is ready, enter the guest pager number "1" into the transmitter and press **OK**.

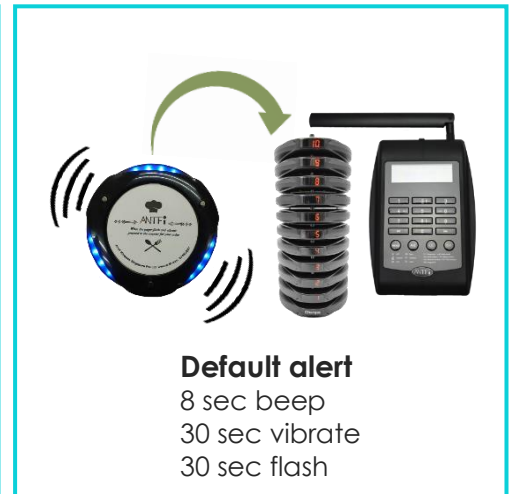

Step 3

Pager alerted. The customer will proceed to collect his/her order or service and return the pager. Place the pager back onto the charger base.