

Quick Setup Guide


Guest Paging w/ ECO G3 Pagers



Components

- ANTFI G3 Transmitter
- G3 Pagers
- Antenna
- 5V 4A Power Adapter

Setup Guide

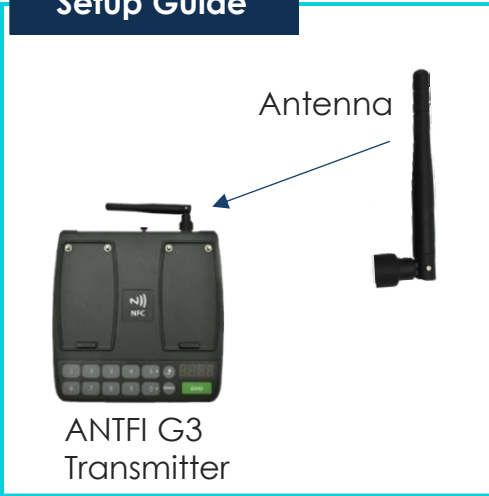

Step 1

Connect the antenna to the connector on the transmitter. Once tightened, ensure that the antenna is pointing vertically upward.


Step 2

Plug the power adapter connector into the transmitter and the 3 pin plug into an electrical wall outlet. A surge protector is highly recommended.

Step 3

Place pagers onto the charger base. You should see a **RED** light on each pager. The **RED** light indicates that the pager is "charging" and **GREEN** light indicates that it is fully charged.

Usage Guide

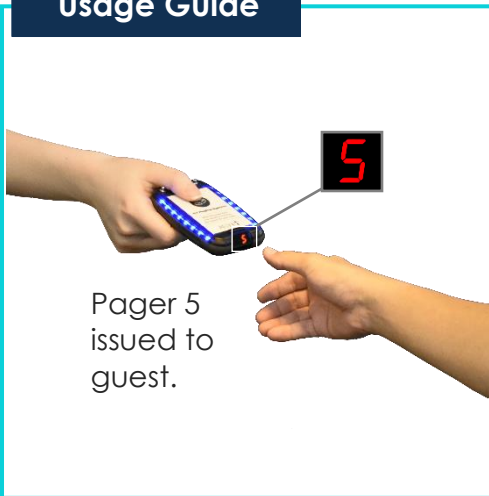

Step 1

Take a pager from the charger base and hand it to the customer. Inform him/her that the pager will alert when order is ready.

Step 2

When the customer's order is ready, enter the guest pager number "5" into the transmitter and press **SEND**.

Step 3

Pager alerted. The customer will proceed to collect his/her order or service and return the pager. Place the pager back onto the charger base.

