

Quick Setup Guide

Guest Paging w/ G7 Coaster Pagers



Components

- ANTFI Mini Transmitter
- G7 Coaster Pagers
- G7 Coaster Charger Base
- Antenna
- 12V 4A Power Adapter



Setup Guide



ANTFI Mini Transmitter



12V 4A Power Adapter



Charging

Step 1

Connect the antenna to the connector on the transmitter. Once tightened, ensure that the antenna is pointing vertically upward.


Step 2

Plug the power adapter into the transmitter and charger base, and the 3 pin plugs into an electrical wall outlet. A surge protector is highly recommended.

Step 3

Place pagers onto the charger base. You should see a **RED** light on each pager. The **RED** light indicates that the pager is "charging". The pagers will be fully charged in 4-5 hours.

Usage Guide

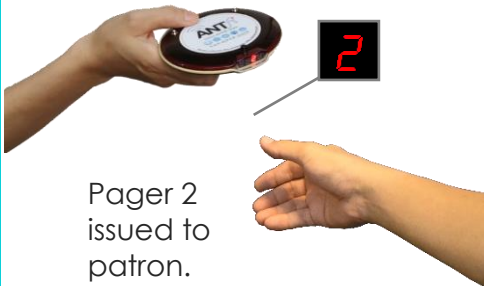

Pager 2 issued to patron.



Step 1

Take a pager from the charger base and hand it to the customer. Inform him/her that the pager will alert when order is ready.

Step 2

When the customer's order is ready, enter the guest pager number "2" into the transmitter and press **SEND**.



Default alert
8 sec beep
30 sec vibrate
30 sec flash

Step 3

Pager alerted. The customer will proceed to collect his/her order or service and return the pager. Place the pager back onto the charger base.